


Morty Fit Guide:

Morty is the model of PaDIOLOK for use with sliders which have latches mortised into the edge of the door.

If you removed the latch from the edge of your door, it might look like one of these: They can vary in size and number of hooks and the keyway shape.

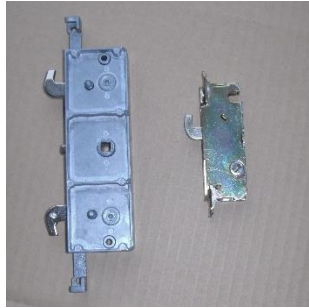

This type of latch takes up a bit of space and so is typically found only on sliders with wider stiles (the vertical side frame of the moving door panel) such as those made of vinyl, wood or fiberglass. Narrow-styled aluminum sliders rarely have mortised latches.



Door with Existing Mortise Latch before Morty Installation

Morty will almost always fit... but let's check the one required dimension anyway.



When installed, as shown to the left, Morty can touch but cannot hit up against the outer door jamb.

Here this door still has an extra ½ inch or 12mm of clearance.

Remove your existing handle.

Then measure from the jamb to the centre line of the keyway within the stile.

You may want to draw a line with a pencil marking the position of the jamb and the center of the keyway and then open the door and measure.



This dimension needs to be \geq ½ inch or 12mm.

PaDIOLOK will use your existing bolt holes too but there are several different standards for those and PaDIOLOK accommodates the differences with multiple holes in the adapter plate(s). Plus we will make new adapter plates to suit any standard which we may have missed so you can be sure this will work for you (unless your door is custom with a custom handle)

That's it!